MAINTENANCE INSTRUCTIONS AND TIPS

vivog bien-être & performance

ENGLISH

ref.2000269
COMPLETE FLEXIBLE DRAIN HOSE for bathtubs:
3001145-3001146-3001148-3001150 3001152-3001154-3001157-3001160

UNCLOGGING THE BATHTUB DRAIN HOSE

To prevent hair from entering the drain hose, we recommend using a drain protector.
Procedure to follow if hair is clogging the bathtub's drain system.
The drain hose can become blocked by an accumulation of hair from pet grooming. To avoid leaks or damage to the drain system, it is important to follow the instructions below.


1. CHECKPOINT 1:
Removing the drain grate



If hair is clogging the drain, you can work directly at the drain grate located at the bottom of the bathtub.
Steps to follow:
1. Empty the bathtub completely and make sure no water remains in the drain system.
2. Unscrew the screw holding the drain grate in place.
3. Carefully remove the grate.
4. Remove all hair and any residue that has built up in the drain opening.
5. Thoroughly clean the contact surfaces between the grate and the bathtub.
6. Remove any old silicone residue between the grate and the bathtub.
7. Apply a fresh bead of sanitary silicone suitable for waterproofing.
8. Reposition the grate correctly and screw the screw back in.
9. Check that the grate is properly seated and that the seal is watertight.

Important : The silicone must be replaced after it has been removed, to ensure a proper seal and prevent leaks under the bathtub.


2. CHECKPOINT 2:
removing the upper ring of the fitting
If necessary, you can unscrew the ring provided for this purpose on the upper fitting of the hose.

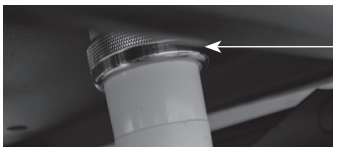

Precautions:
- Only unscrew the ring intended for this operation.
- When reassembling, always check that the fiber gasket is present and in good condition.
- If the fiber gasket is torn, damaged or deformed, it must be replaced before reassembly.
- Screw the ring back on properly without damaging the gasket.

Warning: A fiber gasket that is incorrectly positioned or damaged can cause a leak.

NEVER DISCONNECT THE HOSE AT ITS CONNECTION TO THE DRAIN FITTING (WASTE OUTLET).

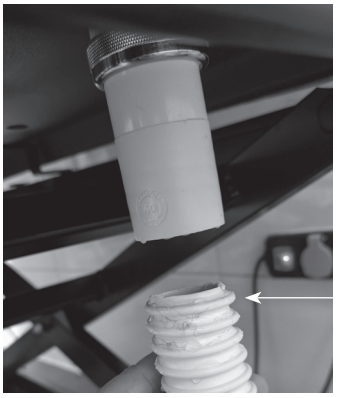

The hose connection to the bathtub's drain fitting is assembled with silicone to ensure a watertight seal.
NEVER UNSCREW THE HOSE AT THIS POINT TO TRY TO CLEAR A BLOCKAGE.
Disassembling this connection can compromise the watertightness of the installation.
IF THIS CONNECTION HAS NEVERTHELESS BEEN DISASSEMBLED:
1. Completely remove all old silicone residue.
2. Thoroughly clean the contact surfaces.
3. Apply fresh, suitable silicone.
4. Screw the hose back into the drain fitting.
5. Let the silicone dry according to the manufacturer's instructions before refilling with water.

Never reassemble this connection without renewing the silicone.

3. CHECKS AFTER THE PROCEDURE:
Before putting the bathtub back into service:
- Check that all connections are properly tightened.
- Check that the fiber gasket is correctly in place.
- Check that the grate is securely fixed.
- Allow the silicone to dry for the required time.
- Run a drainage test and carefully check for leaks under the bathtub.

VIVOG SAS : 10 rue de la Mairie - 37390 Chanceaux-sur-Choisille - FRANCE - **Tél. +33 (0)2 47 73 38 38** - e-mail : infos@vivog.fr - **site web : www.vivog.fr**